

ADEUNIS REPEATER WINDOWS APP


Application installation Guide for Windows.

Supported Windows version: Windows 10 64-bit.

FIRST INSTALLATION

Follow the steps:

1. Go to <https://www.adeunis.com/en/produit/repeteur-2/>, scroll to “Download” section and select the windows configurator.
2. Once the download is finished, run the file you just downloaded and the installation will run automatically.
3. Once the installation is complete, you can start using the application.

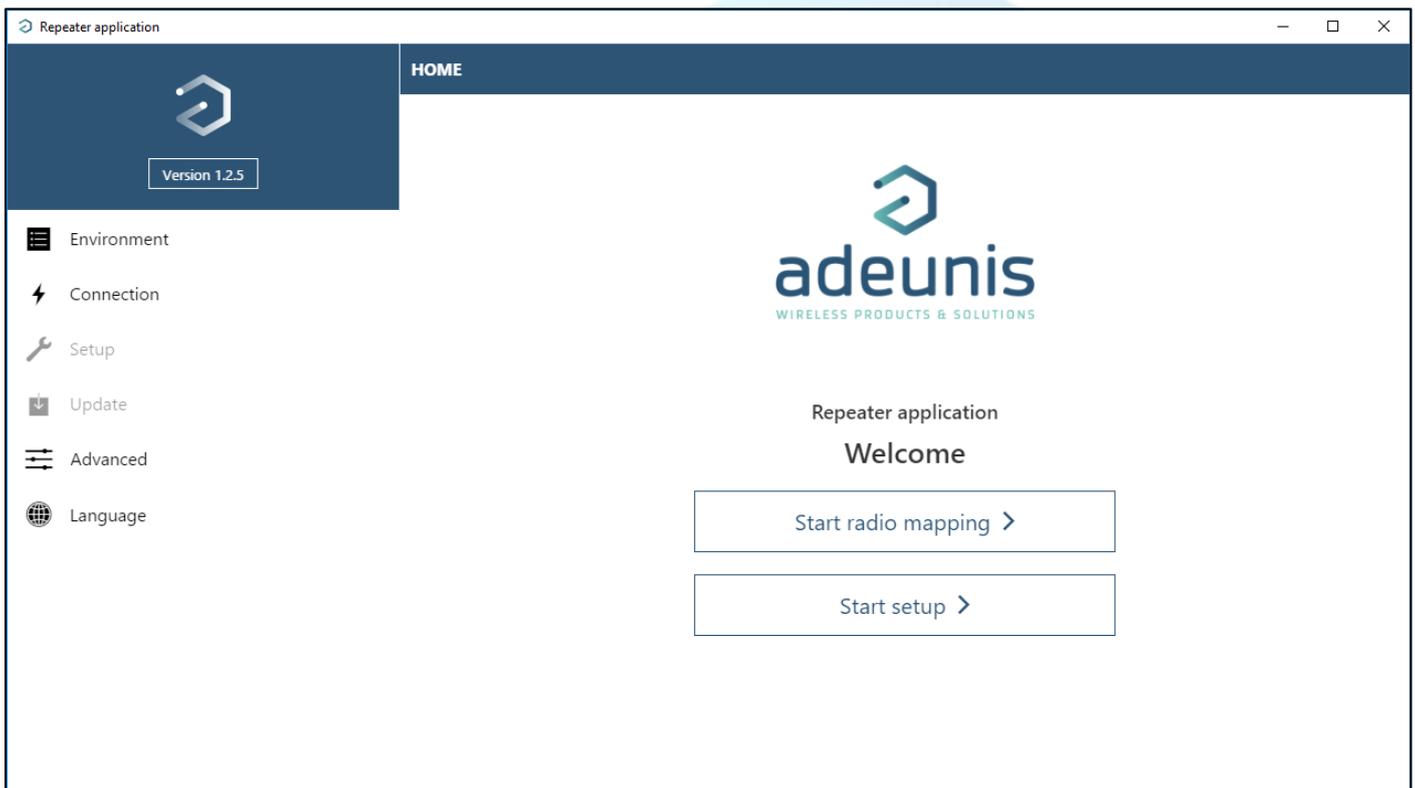

Note: a launch shortcut for the application is now available on the desktop

UNINSTALL THE APPLICATION

Just follow the standard procedure for uninstalling application under Windows 10:


- Go to the "Add or Remove Programs" menu in the "Settings" section of Windows 10
- Search for "RepeaterApp"
- Select the application and click on "Uninstall"

FAQ

The installation went well but I can not connect my repeater (lock status "Connecting")

The connection failure may be related to a problem with the USB driver used for the repeater. To check or install the driver, follow the procedure below.

Connect the repeater to a computer using a suitable USB cable. During the connection, the product must be recognized by the computer as a "USB Serial Device". Check the correct product detection by opening the Device Manager and displaying the "Ports (COM and LPT)" section.

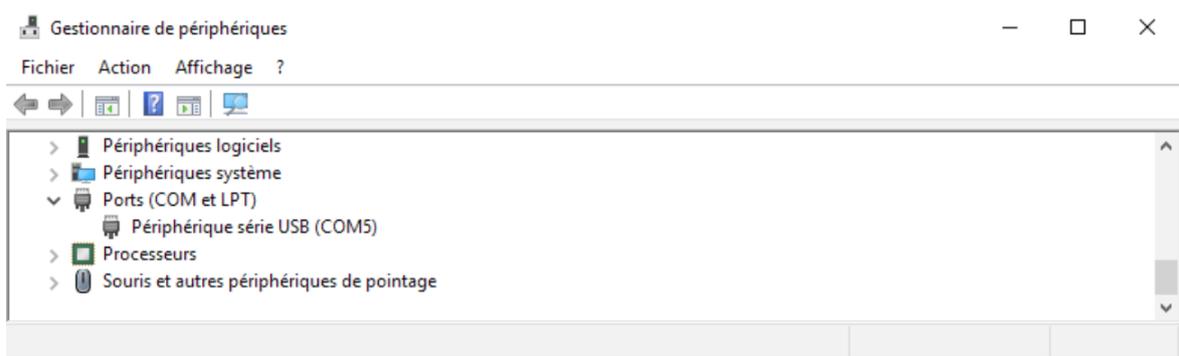

If the repeater is well detected, it appears in the list as on the screen above.

If no such device appears, you must install the driver again:

1. Go to <https://www.adeunis.com/produit/repeteur/> and download the driver: «DRIVER - STSW-STM32102_VCPDRIVER »

Products / SIGFOX REPEATER



SIGFOX REPEATER

Expand sigfox network coverage

Function : Network infrastructure



Available technologies



INFORMATION AND ORDER

(...)

Download



REPEATER_SIGFOX_UG_V1.1.0_EN



REFERENCE_TRANSMITTER_SIGFOX_UG_V1.1.0_EN



QUICK START GUIDE_SIGFOX_REPEATER



DS_REPEATER_EN



DRIVER - STSW-STM32102_VCPDRIVER



REPEATER-APP-V1.2.6A_SETUP

2. Once the download is done, extract and run the file "DRIVER - STSW-STM32102_VCPDRIVER" and start the installation.
3. When the installation is complete, repeat the checking steps to ensure the repeater is correctly detected.